

LIMITED WARRANTY

Aroma Housewares Company warrants its products against defects in material and workmanship for one year from the provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge. Proof of the date of purchase, such as the original dated sales receipt, will be required with any request for warranty repair or replacement. All liability is limited to the amount of the purchase price.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, fire, lightning, earthquake, other natural calamities, war. The warranty excludes accessories and replacement parts. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60Hz).

Aroma's sole obligation under the warranty shall be to replace the defective product with a working one or a similar model of equivalent value, if the same model is not available, in the occurrence of any failure or defect covered under the warranty during the warranty period. Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286 | CustomerService@AromaCo.com

M-F, 8:30am-4:30pm, Pacific Time

www.AromaCo.com

Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.
.....

Note:

· **Failure to register your product will not diminish your warranty rights.**

· Proof of purchase is required for all warranty claims.



To Enhance and Enrich Lives.



www.AromaCo.com

AROMA®



instruction manual

ARD-125

Rice & Grain Dispenser

Questions or concerns about your Aroma product?
www.AromaCo.com/Support
1-800-276-6286

DISCOVER
more of our
products!



Digital Rice & Grain
Multicookers



Rice & Grain
Cookers



Electric Kettles



Indoor Grills



...and More!

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT



SCAN TO REGISTER
[AromaCo.com/registration](https://www.AromaCo.com/registration)

Registration is quick and easy.

Be notified of:

- new product releases
- new test kitchen recipes
- sales and promotions
- ...and more!



/AromaHousewares




IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using the dispenser, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Store on a level, dry surface and in a room that will not reach below 39°F or above 104°F.
3. Close supervision is necessary when the appliance is used by or near children.
4. The use of accessory attachments not recommended by Aroma® Housewares may result in a damaged product or injury.
5. Do not use outdoors.
6. Do not place on or near a hot gas or electric burner or in a heated oven.
7. Do not use the dispenser for anything other than its intended use.
8. Do not use the dispenser to store flour, wheat, or sugar.
9. To avoid overheating and damage to the product, do not store in direct sunlight.
10. Always make sure the exterior and interior of the appliance is dry prior to use.
11. Intended for household use only.

Parts Identification

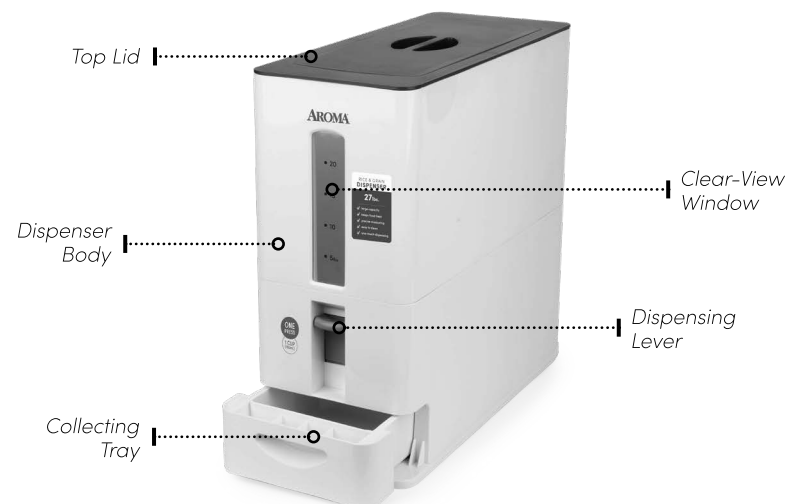

SAVE THESE INSTRUCTIONS

BEFORE FIRST USE



1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that items have been received in good condition. Inspect the container for any chips or cracks.
3. Tear up all plastic bags and dispose of properly as they can pose a risk to children.
4. Wipe the interior and exterior using a clean, soft cloth.
5. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.
6. Reassemble for use.

TO CLEAN

1. Empty the container of all food and debris.
2. Wipe the interior and exterior using a clean, soft cloth.
3. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.
4. Reassemble for next use.

STORING & DISPENSING FOODS

1. Open the lid on the top of the dispenser.
2. Slowly add rice, grain, or other dry food into the dispenser. The dispenser must be filled with a minimum of 3 pounds and a maximum of 27 pounds of rice.
3. Place the lid on top of the dispenser.
4. Press the dispensing lever down to dispense one rice measuring cup (180mL) of dry food into the collecting tray. After dispensing, push the lever up to the highest position
5. Remove the collecting tray and use the ingredients as desired.
6. After each use, always replace the collecting tray into the dispenser and make sure it is closed firmly.



Caution:

Never use a damp cloth to clean the interior of the dispenser or collecting tray. In order to preserve foods, the interior of the dispenser must be kept dry.

Do not overfill the dispenser. **The maximum capacity of this dispenser is 27 pounds (13 kg.) of rice.**

Do not fill the dispenser if the interior is wet. Food will not properly store and preserve if there is any moisture in the storage container.

Do not turn the dispensing knob more than 5 consecutive times without first collecting the food dispensed into the collecting tray. The collecting tray cannot contain more than 5 cups of dry food at a time.

Note:

When pressing down the dispensing lever, note that there should be 2 to 3 seconds interval time. To ensure every press will dispense a full volume of dry food, gently shake the dispenser to settle the dry food inside.

Published By:

Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

©2022 Aroma Housewares Company | All rights reserved.