

## LIMITED WARRANTY

Aroma Housewares Company warrants this product against defects in material and workmanship for one year from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$20.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside of the United States.

## SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

**1-800-276-6286**

M-F, 8:30am-4:30pm, Pacific Time

Or we can be reached online at:

**CustomerService@AromaCo.com**



Activate your warranty.  
Registration is quick and easy.

SCAN TO REGISTER  
or visit [AromaCo.com/registration](http://AromaCo.com/registration)

Aroma Housewares Company  
6469 Flanders Drive, San Diego, CA 92121, U.S.A.  
**1-800-276-6286** | [www.AromaCo.com](http://www.AromaCo.com)  
M-F, 8:30am - 4:30pm, Pacific Time

### Note:

Proof of purchase is required for all warranty claims.



To Enhance and Enrich Lives.

# AROMA®



# instruction manual

ARD-133

## Rice & Bean Dispenser

Questions or concerns about your Aroma product?

[www.AromaCo.com/Support](http://www.AromaCo.com/Support)

**1-800-276-6286**



[www.AromaCo.com](http://www.AromaCo.com)

DISCOVER  
more of our  
products!



Multicookers/  
Rice Cookers



Pot-Style  
Rice Cookers



Water Kettles



Indoor Grills



Woks

# AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

## REGISTER YOUR PRODUCT



Activate your warranty.  
Registration is quick and easy.

Be notified of:

- new product releases
- new test kitchen recipes
- sales and promotions
- ...and more!

SCAN TO REGISTER  
[AromaCo.com/registration](https://www.AromaCo.com/registration)



/AromaHousewares




## IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using the dispenser, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Store on a level, dry surface and in a room that will not reach below 39°F or above 104°F.
3. Close supervision is necessary when the appliance is used by or near children.
4. The use of accessory attachments not recommended by Aroma® Housewares may result in a damaged product or injury.
5. Do not use outdoors.
6. Do not place on or near a hot gas or electric burner or in a heated oven.
7. Do not use the dispenser for anything other than its intended use.
8. Do not immerse the dispenser in water or any other liquid.
9. Do not use the dispenser to store flour, wheat, or sugar.
10. To avoid overheating and damage to the product, do not store in direct sunlight.
11. Always make sure the exterior and interior of the appliance is dry prior to use.
12. Intended for household use only.

## Parts Identification

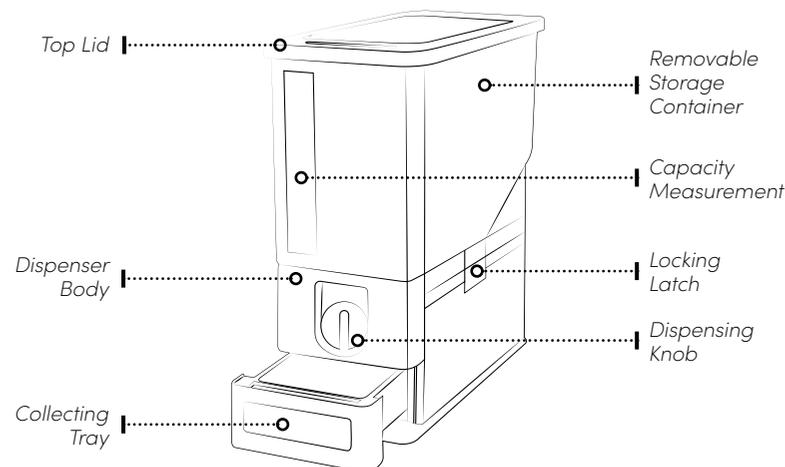

## BEFORE FIRST USE



1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that items have been received in good condition. Inspect the container for any chips or cracks.
3. Tear up all plastic bags and dispose of properly as they can pose a risk to children.
4. Wipe the interior and exterior using a clean, soft cloth.
5. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.
6. Reassemble for use.

## TO CLEAN

1. Empty the container of all food and debris.
2. Wipe the interior and exterior using a clean, soft cloth.
3. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.
4. Reassemble for next use.

## STORING & DISPENSING FOODS

1. Open the lid on the top of the dispenser.
2. Slowly add rice, beans, or other dry food into the dispenser. The dispenser must be filled with a minimum of 5 pounds and a maximum of 33 pounds of rice.
3. Place the lid on top of the dispenser.
4. Turn the dispensing knob 90 degrees to the right to dispense one rice measuring cup (180mL) of dry food into the collecting tray. After dispensing, the knob will then automatically return to upright position.
5. Remove the collecting tray and use the ingredients as desired.
6. After each use, always replace the collecting tray into the dispenser and make sure it is closed firmly.



## Caution:

Never use a damp cloth to clean the interior of the dispenser or collecting tray. In order to preserve foods, the interior of the dispenser must be kept dry.

Do not immerse the dispenser or any of its parts in water.

Do not overfill the dispenser. **The maximum capacity of this dispenser is 33 pounds (15 kg.) of rice.**

Do not fill the dispenser if the interior is wet. Food will not properly store and preserve if there is any moisture in the storage container.

Do not turn the dispensing knob more than 5 consecutive times without first collecting the food dispensed into the collecting tray. The collecting tray cannot contain more than 5 cups of dry food at a time.

## Note:

When turning the dispensing knob, note that there should be 2 to 3 seconds interval time between each 90 degree turn. To ensure every turn will dispense a full volume of dry food, gently shake the dispenser to settle the dry food inside.

Rice roughly doubles in amount when cooked. 1 cup of uncooked rice is equal to 2 cups of cooked rice.

To remove the storage container, flip up both of the locking latches on either side of the base.