

**DISCOVER
more of our
products!**



Digital Rice & Grain
Multicookers



Rice & Grain
Cookers



Electric Kettles



Indoor Grills



...and More!



/AromaHousewares

Published By:

Aroma Housewares Co.

6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

©2024 Aroma Housewares Company

All rights reserved.

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement our kitchen.

REGISTER YOUR PRODUCT



SCAN TO REGISTER

AromaCo.com/registration

Registration is quick & easy.

Be notified of:

- new product releases
- new test kitchen recipes
- sales and promotions

...and more!

For more information about our warranty policy, please visit our website at:

AromaCo.com/warranty-claims

BEFORE FIRST USE

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags and dispose of them properly, as they can pose a risk to children.
4. Clean buffet serving frame and trays by following steps 1 through 3 of "To Clean" below.

TO CLEAN

1. Dispose of any remaining food or debris.
2. Separate the buffet serving trays from the frame and clean with warm, soapy water.
3. Dry all parts thoroughly & re-assemble for use.

USING THE BUFFET SERVING TRAYS

1. Fill your 18–22 qt. roaster oven's cooking pan with 2 qts. of water, then lower the cooking pan into the roaster oven.
2. Place the buffet server frame on top of the cooking pan and securely place the lid on top.
3. Plug the power cord into an available 120V AC wall outlet.
4. Turn the temperature control dial to **Keep Warm**. The heat indicator light will illuminate.
5. Allow the roaster to preheat. The heat indicator light will turn off once the cooking pan has reached the selected temperature.
6. Once the roaster has preheated, open the lid with caution, wearing protective heat-resistant gloves to prevent injury.
7. Add desired food into each of the serving trays, then lower each tray into the server frame.
8. When finished serving, turn the temperature control dial to the MIN position then remove the plug from the wall outlet.